

HYDRO-TONE®


SPORTS / FITNESS AQUATIC EXERCISE SYSTEMS

Your Hydro-Boots come to you only partially assembled. The comfort pads are already attached to the Hydro-Fins. Your job of assembly therefore consists of simply attaching the TPU straps to the Hydro-Fin assembly.

To affix the black foot piece with straps (TPU Strap) to the yellow Hydro-Fin do the following:



- (1). Unfold the velcro strap at the top of the black foot piece.

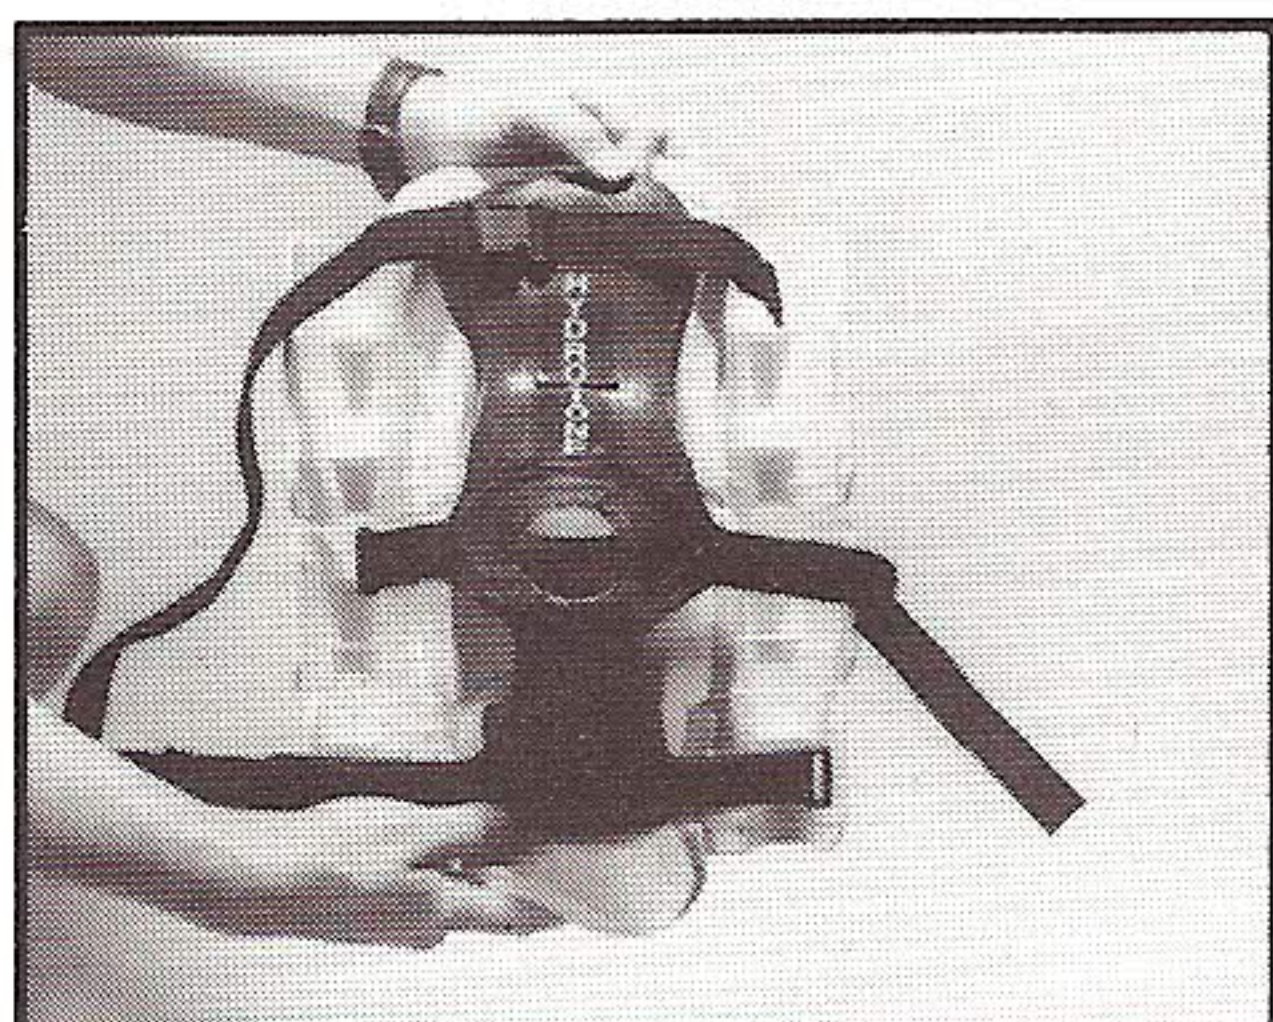


- (2). Align the top of the black foot piece (TPU) with the top of the yellow Hydro-Fin. Note the word Hydro-Tone runs down the back of the TPU, so the top of the TPU is at the top of the word Hydro-Tone. (Note that the largest fin segment is at the top.)



- (3). Take the "D" ring which is attached to the top nylon strap, and push it through the corresponding slot in the Hydro-Fin. NOTE THAT THE "D" RINGS ARE LONGER THAN THE SLOTS IN THE HYDRO-FINS. To best insert the "D" ring, push it through at an angle, with the narrow width entering the slot first.



- (4). Now take the velcro strap on the other side and thread it through the corresponding Hydro-Fin slot.

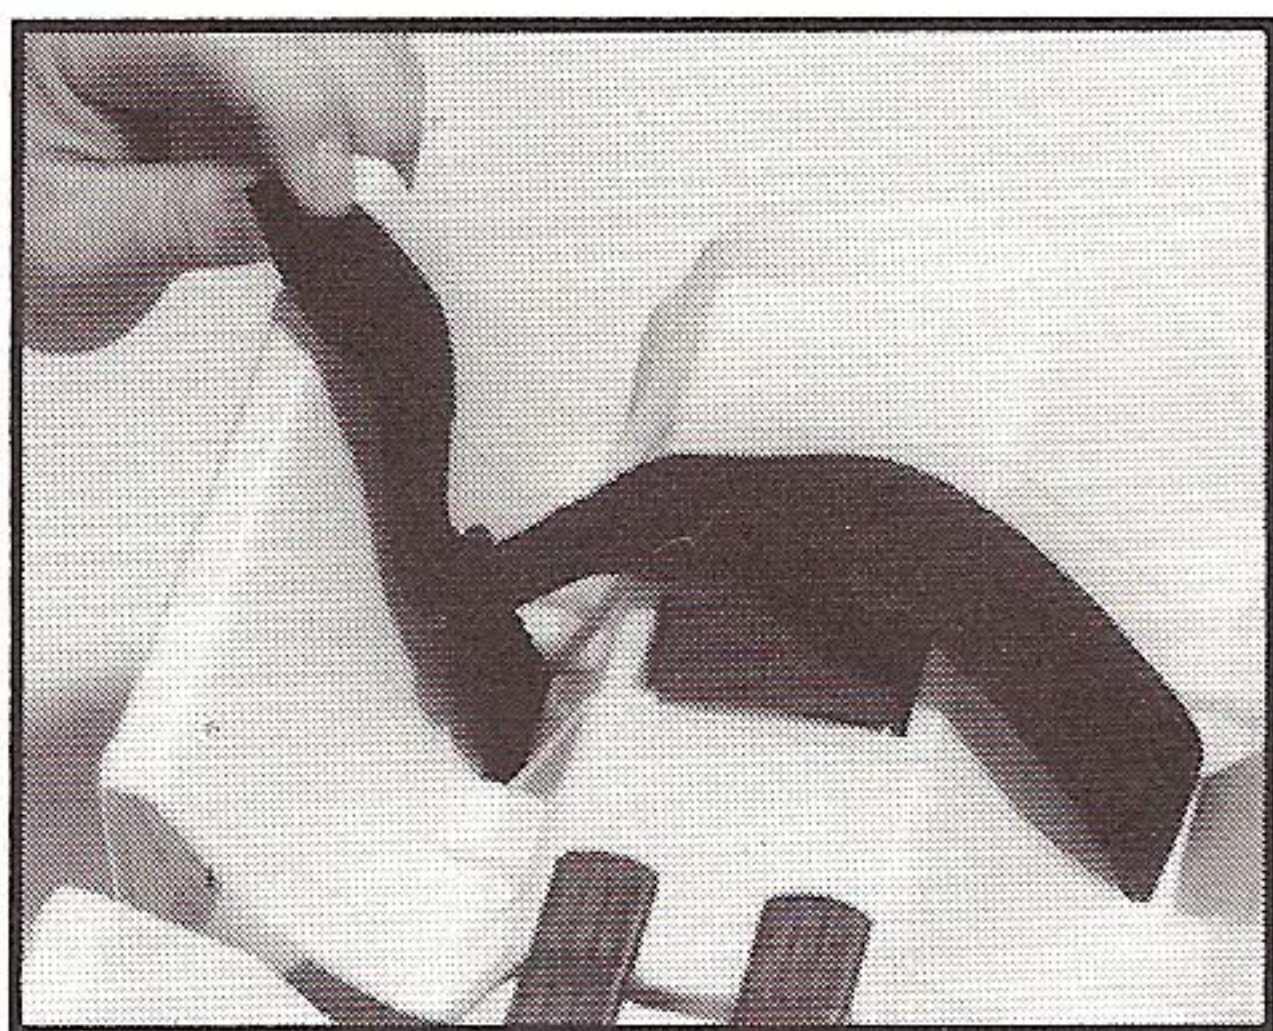

- (5). Thread the velcro strap through the "D" ring and fold it back onto itself. When this is properly done, the velcro should stick to itself and there should be no twists in any of the straps.



- (6). Repeat this procedure with the remaining ankle and toe straps and fins. Once all the straps are properly attached, your Hydro-Boots are ready for use.

If you have any questions please call. We will be happy to assist you.